Chapter 5

Receivers : an overview for non-specialists

Bernard Lazareff

lazareff@iram.fr

IRAM, 300 rue de la Piscine, F-38406 Saint Martin d'Hères, France

5.1 Introduction

The purpose of a receiver is to collect efficiently the astronomical signal that has been concentrated by the antenna near its focal point, and to amplify it with a minimum of extra noise to a level suitable for further processing by the spectrometers or continuum detectors. This is illustrated by figure 5.1.

Figure 5.2 shows the main subsystems of a receiver, that we will discuss below.

5.2 Coupling optics

Up to and including the antenna, the astronomical signal propagates in free space. On the other hand, the first signal processing unit —the mixer— requires the electromagnetic energy to be confined by metallic walls, in a waveguide. The transition between these two modes of propagation occurs at the *horn*.

Assume for a moment that the horn would be placed at the Cassegrain focus of the antenna. Good matching would be difficult to achieve because the field amplitude from a point source (Airy pattern) exhibits radial oscillations alternating between positive and negative values, and has a scalesize proportional to wavelength.

These problems are avoided by coupling —via suitable relay optics— the horn to an *image of the aperture*. This fulfills the condition of *frequency-independent illumination*. In other words, imagine that we propagate the horn mode back to the antenna aperture as if we were dealing with a transmitter, then the illumination pattern is independent of frequency. Using suitably designed corrugations on the inner

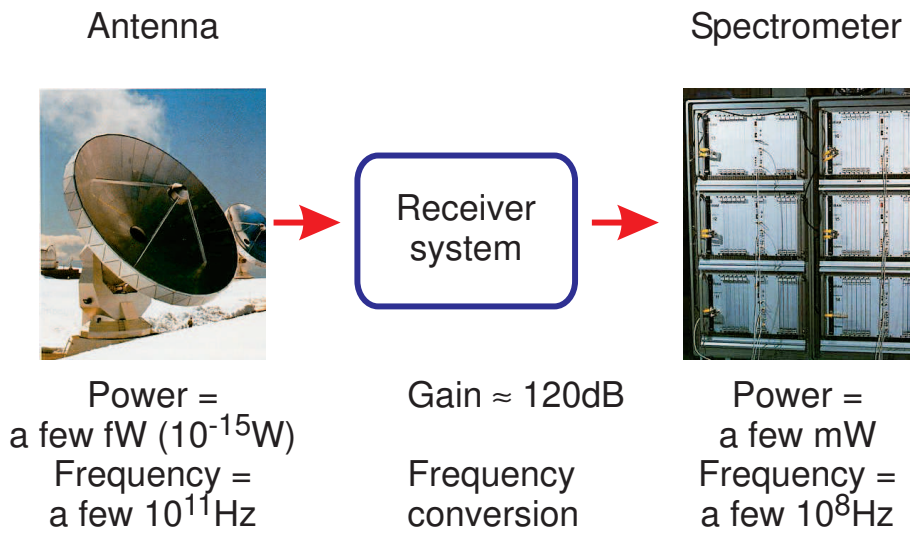

Figure 5.1: Orders of magnitude for frequencies and power levels delivered by the antenna to the receiver, and by the receiver to the spectrometer. The main roles of the receiver are to down-convert the signal frequency to a range suitable for analysis, and to amplify it while adding as little noise as possible.

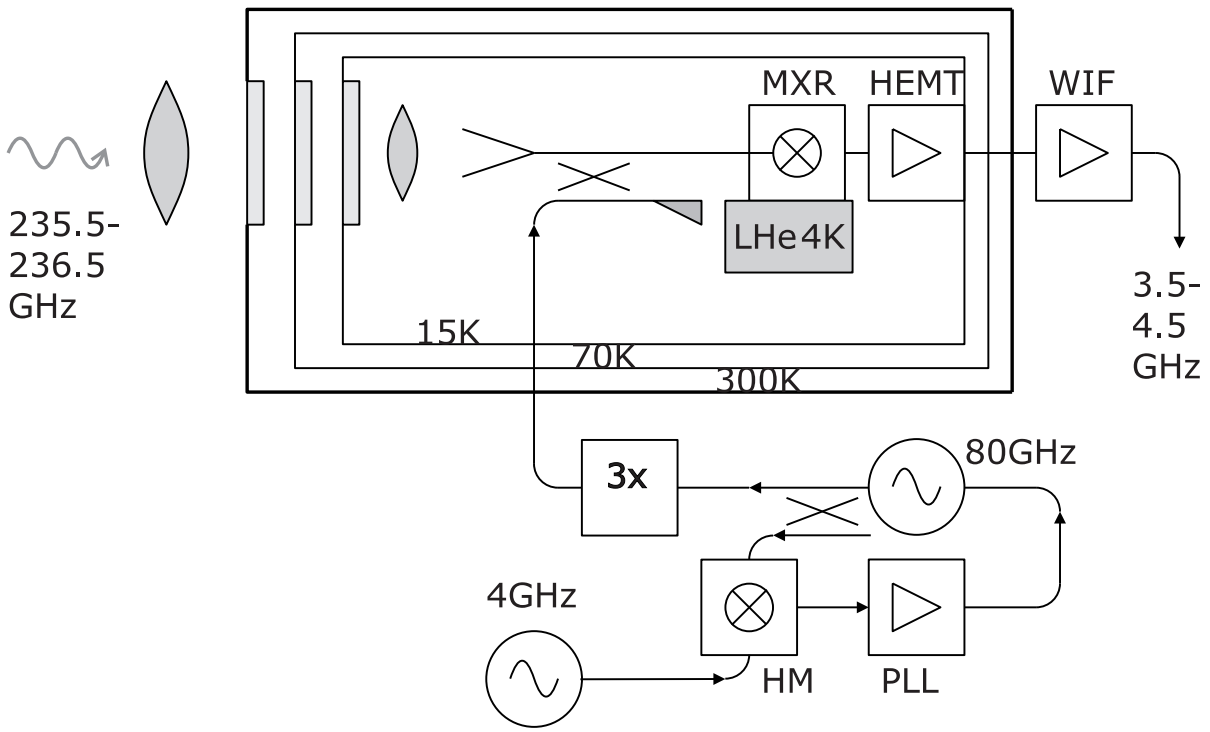

Figure 5.2: Synoptic diagram of a typical receiver. This diagram is grossly simplified; for instance, the optics involves mirrors, elliptical and planar, and also grids; the LO/PLL system is actually more complicated than shown.

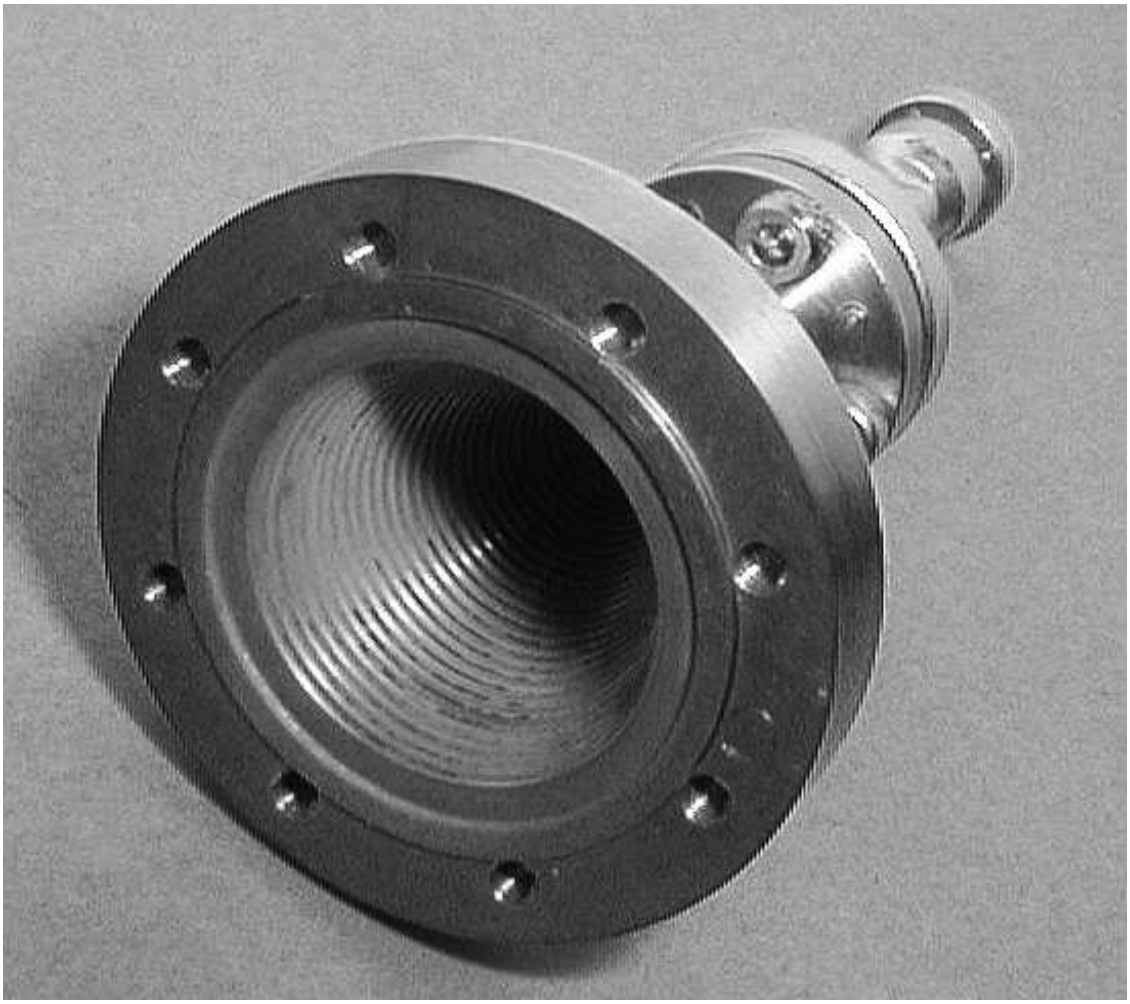

Figure 5.3: A corrugated horn for the 150GHz band. The phase-correcting lens normally present at the aperture has been removed to reveal the corrugations. The diameter of the aperture is about that of a typical coin (1DM/100Ptas/1F). All the waves collected by the 30-m antenna converge to the horn with a precise phase relationship and are then squeezed into a waveguide 2 x 1 mm across. The ratio of areas is three hundred million!

Figure 5.4: Frequency down-conversion by mixing. Left: schematic diagram. Right: representation in frequency space.

wall of the horn (see fig. 5.3) the TE10 mode of the rectangular waveguide couples to a mode at the aperture of the horn whose amplitude has circular symmetry, and whose polarization is pure linear.

5.3 Why we need heterodyne receivers

In the present context, *heterodyne* refers to receivers where the frequency of the input signal is shifted to lower frequencies. This is done by adding to the (small) input signal a (relatively) strong monochromatic signal, called the *local oscillator* (LO) and passing the sum through a non-linear device, whose output contains (among others) the difference frequency. Although a non-linear device is involved, the transformation from input to output is linear for the small signal. This process is called mixing or down-conversion. The output signal is called the *intermediate frequency* (IF). Actually the complete signal processing at a radiotelescope can involve up to four heterodyne conversions. The process of mixing is illustrated by figure 5.4 and by the simple equations below.

$$\begin{aligned} v_{LO} &= V_{LO}\,\cos(\omega_{LO}t) \\ v_S &= V_S\,\cos(\omega_S t + \phi_S) \\ v_{IF} &= A\,(v_{LO} + v_S)^2 \\ &= A\,V_{LO}V_S\cos((\omega_S - \omega_{LO})t + \phi_S) + \cdots \\ &= A\,V_{LO}V_S\cos((\omega_{LO} - \omega_S)t - \phi_S) + \cdots \end{aligned}$$

Interferometric observers, take a look at the last two lines, and note that, if you insist on keeping positive angular frequencies (and you really should), the signal phase enters in the IF phase with a positive sign in USB ($\omega_S > \omega_{LO}$), and a negative side in LSB.

The first reason why heterodyne down-conversion is needed is that only few signal processing devices exist at millimeter frequencies, and definitely not the fully parallel spectrometers (as opposed to multiplex devices such as FTS) that are routinely used for spectroscopic observations.

Then arises the question of where in the signal processing chain to operate the down-conversion. Basically we have no choice, because hardly any amplifiers are available in the millimeter range, except in the 3mm band, where they do not match the low noise properties of SIS mixers (to be discussed below). So we *must* perform a down-conversion before we can amplify the signal.

Before we leave the topic, it is worth noting that *heterodyne* means different things to different people. For engineers, it means that a mixer is used for down-converting the signal frequency; that's how the word is used above. For astronomers, heterodyne receivers are associated with spectroscopic observations; yet, there is only a quantitative difference, but no essential difference, between bolometer detection with a 80-GHz bandpass, and observing with a filterbank having 1-MHz bandpass. Finally, for physicists, heterodyne means with phase-preserving. In that sense, indeed, a bolometer is not phase-preserving, while a "heterodyne" receiver is phase-preserving only if it is defined *without* the final detector.

5.4 Local oscillator system

All the local oscillators in the IRAM telescope use Gunn oscillators. A Gunn diode is a semiconductor device that exhibits negative dynamic resistance over a suitable range of frequencies. Output powers of the order of 10–50mW can be obtained between 60 and 120 GHz. To achieve oscillation at a precise frequency, two means are combined. First, the Gunn diode is coupled to a coaxial cavity that defines the oscillation frequency, and whose high quality factor provides a good spectral purity. Its resonant frequency can be adjusted mechanically; this allows the desired frequency to be approached within ≈10 MHz. Secondly, a fraction of the millimetric radiation from the Gunn oscillator is used to produce a beat with a reference microwave oscillator at a frequency of a few GHz; actually, the Gunn oscillator signal beats with a harmonic (n=17–65, depending on the systems) of the reference frequency. The beat signal is used to "servo" by electronic tuning the Gunn oscillator to a multiple of the reference. Actually, not only the frequency, but also the phase of the local oscillator is locked to the reference oscillator, which is essential for interferometry, whether connected-array or VLBI. This description of the *phase-lock* system is over-simplified.

Local oscillator frequencies above 120GHz can generally not be generated directly by Gunn oscillators. In that case, the Gunn power is fed to a *frequency multiplier*, which is a non-linear device like the mixer, but based on non-linear capacitance, and optimized to produce a certain harmonic (×2, ×3 or ×4 in the case of IRAM systems) of the input frequency. The efficiency of the multiplication process is typically a few percent.

5.5 Local oscillator injection

As mentioned above, the local oscillator power must be added to the astronomical signal before it enters the mixer. When the mixers were based on Schottky diodes (10 years ago and more), they required an LO power of almost a mW. As a consequence, the LO power was coupled via a *diplexer*, which is like a frequency-selective coupler, allowing the mixer to be coupled with close to unity efficiency to *both* the input signal and the LO. With the advent of SIS mixers, and due to their modest LO power requirements (read below), a new method can be used, based on frequency-independent couplers. A fraction f (typically 1%) of the LO power is coupled into the signal path; the rest is wasted! The fraction f must be kept small because the same amount f of room-temperature blackbody noise is also coupled into the signal path. The coupler requires no adjustment and is located close to the receiver, inside the *cryostat* (discussed below).

5.6 Photon-assisted tunneling

All mixers in IRAM receivers are based on SIS junctions. An SIS junction consists of two layers of superconducting metal (Niobium) separated by a few nanometers of insulator (Aluminum oxide). The insulator is so thin that charged particles can tunnel through the barrier. The area of a junction is typically one to a few μm^2. SIS junctions operate at the boiling temperature of He: 4.2K (at sea level).

Two kinds of charged particles can exist in a superconductor: a) ordinary electrons; b) so-called Cooper pairs, consisting of two electrons interacting and weakly bound together by the exchange of phonons (lattice vibrations); breaking a Cooper pair costs an energy 2Δ. Correspondingly, two kinds of currents can flow across the junction: the Josephson current, consisting of Cooper pairs, and the so-called quasi-particle current, consisting of "ordinary" electrons (presumably "electron" did not sound fancy enough). To keep this digression into SIS physics short, let's just state that the Josephson current can be ignored. At the operating temperature of the mixer, and in an unbiased junction, the population of quasi-particles is virtually negligible. But, if the bias voltage is raised to the *gap voltage*

$$V_g = 2\Delta/e$$

the flow of quasi-particles across the junction becomes possible because the energy gained across the drop of electrical potential compensates for the energy spent in breaking a Cooper pair. See on figure 5.5 the "LO off" I-V characteristic.

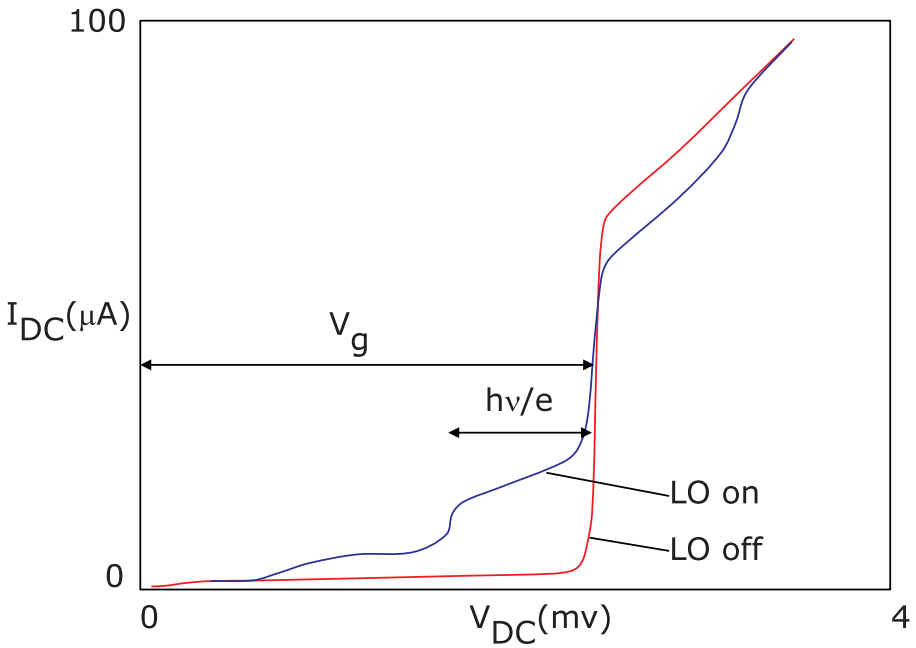

Figure 5.5: Current-voltage characteristics of an SIS junction operating in a mixer. The two curves were measured without and with LO power applied (frequency 230GHz); they have been slightly idealized (for pedagogical reasons, of course).

In the presence of electromagnetic radiation, the situation is modified as follows. If a RF photon is absorbed, its energy $h\nu$ can contribute to the energetic budget, which can now be written as:

$$eV_{\rm bias} + h\nu = 2\Delta$$

or, equivalently:

$$V_{\rm bias} + h\nu/e = V_g$$

In other words, the onset of conduction occurs at $V_g - h\nu/e$. The region of the I-V curve below the gap voltage where photon-assisted tunneling occurs is called the *photon step*. See the "LO on" curve on figure 5.5. Figure 5.5 is based on actual measurements of a 2-junction series array: the voltage scale has been scaled $\times\frac{1}{2}$ to illustrate a single junction. For a more detailed analysis of SIS junctions and their interaction with radiation see e.g. [Gundlach 1989].

So far I've shown you qualitatively that an SIS junction can function as a total power detector. The responsivity (current generated per power absorbed) can even be estimated to be of the order of one electron per photon, or: $D \approx e/h\nu$. How does that relate to frequency down-conversion? Assume that a power detector is fed the sum of a local oscillator (normalized to unit amplitude for convenience) $v_{LO} = \cos\omega_{LO}t$ and a much smaller signal at a nearby frequency: $v_S = \epsilon\cos\omega_S t$. Assume this functions as a squaring device and discard high-frequency terms in the output:

$$v_{\rm out} = (v_{LO} + v_S)^2 \longrightarrow \frac{1}{2}\epsilon\, cos(\omega_{LO} - \omega_S)t$$

So, a power detector can also function as a frequency down-converter (subject to possible limitations in the response time of the output).

The LO power requirement for an SIS mixer can be estimated as follows. A voltage scale is defined by the width of the photon step: $h\nu/e$. Likewise, a resistance scale can be defined from R_N, the resistance of the junction above V_g; junctions used in mixers have $R_N \approx 50\Omega$. So, the order of magnitude of the LO power required is:

$$P_{\rm LO} \approx (h\nu/e)^2/R_N$$

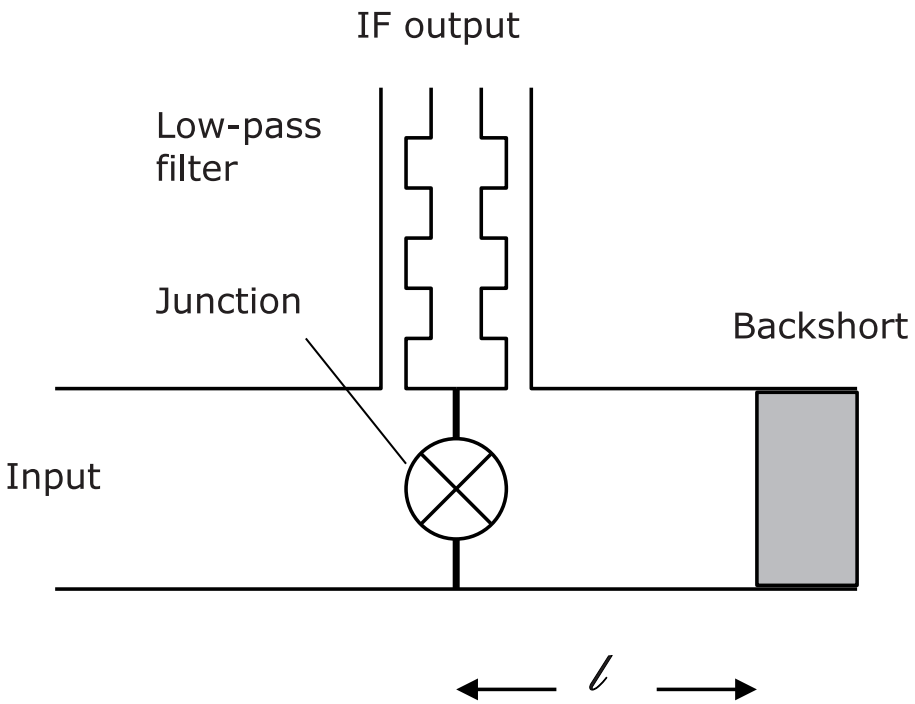

Figure 5.6: Rough sketch of the main elements of a mixer

about 20 nW for a 230 GHz mixer. This makes it possible to use the wasteful coupler injection scheme discussed above.

Because the insulating barrier of the junction is so thin, it posesses a capacitance of about $65fF\,\mu m^{-2}$. At the RF and LO frequencies, the (imaginary) admittance of that capacitance is about 3–4× the (approximately real) admittance of the SIS junction itself. Therefore, appropriate tuning structures must be implemented to achieve a good impedance match (i.e. energy coupling) of the junction to the signals.

The minimum theoretical SSB noise for an SIS mixer is $h\nu/k$, 11K at 230GHz; the best IRAM mixers come within a factor of a few ($\approx 4\times$) of that fundamental limit. These numbers are for laboratory measurements with minimal optics losses; practical receivers have a slightly higher noise.

5.7 Mixer

A sketch of a mixer is shown on figure 5.6, again grossly over-simplified. The junction is mounted across the waveguide, in the direction of the electric field. One side of the junction is connected to the outside of the mixer block, both to bring out the IF beat signal, and to provide the DC bias. That connection is made through a low-pass filter to avoid losing precious RF energy.

One end of the waveguide is the input of the mixer; the other end must be terminated somehow. At the zero-order approximation, one would like the junction to "see" an open circuit when "looking into" the rear end of the waveguide. More generally, the junction should see a pure imaginary impedance, so that no energy is wasted. A simple calculation shows that a transmission line having a length l, and terminated into a short-circuit, has an apparent impedance:

$$Z_{BS} = j\, Z_0 \tan(2\pi l/\lambda)$$

where Z_0 and λ are respectively the propagation impedance and wavelength in the waveguide, and l is the distance to the short-circuit. In particular, for $l = (\frac{n}{2} + \frac{1}{4})\lambda$, the apparent impedance is an open circuit. More generally, by adjusting l, an arbitrary imaginary impedance can be placed in parallel with the junction. Together with the tuning structures mentioned in the previous section, such an *adjustable backshort* contributes to achieve the best possible match of the junction impedance.

For various reasons (one of which is reducing the noise contribution from the atmosphere) it is desirable that the mixer should operate in *single-sideband* mode. We explain how this is achieved with a crude zero-order model. Assume that the best impedance match of the junction is obtained when the apparent impedance of the backshort seen from the junction is an open circuit. Assume we observe in the lower sideband at a frequency $\nu_L = \nu_{LO} - \nu_{IF}$, and want to reject the upper sideband $\nu_U = \nu_{LO} + \nu_{IF}$. That condition can be achieved if, at the frequency ν_U, the junction is short-circuited. So, we must meet the two conditions:

$$l = (\frac{n}{2} + \frac{1}{4})\lambda_L \quad \text{lower sideband}$$
$$l = (\frac{n}{2} + \frac{1}{2})\lambda_U \quad \text{upper sideband}$$

for some integer n; we gloss over the distinction between free-space and waveguide wavelengths. The two conditions (one unknown) can be *approximately* met for some l close to

$$l_{\text{reject}} = \frac{1}{8}\frac{c}{\nu_{IF}}$$

Because for current mixers in the 100GHz band, the IF frequency is relatively low (1.5GHz), single-sideband operation requires additional tricks...

Returning to practicalities, tuning a receiver requires several steps (which used to make astronomers a bit nervous at the 30-m telescope when all was done manually). First the local oscillator must be tuned and locked at the desired frequency. Then the backshort is set at the appropriate position, and the junction DC bias voltage is set. Finally the LO power is adjusted to reach a prescribed junction DC current (of the order of $20\mu A$). These adjustments are made by a combination of table lookup and optimization algorithms under computer control. Altogether this involves between 11 and 13 adjustments, mechanical or electrical, yet this process takes only a few minutes with the current systems.

5.8 Cryostat

First, conducted heat would quickly evaporate the helium. Second, a big icicle of water, nitrogen, oxygen, etc... would condense around the reservoir. Conduction and condensation are avoided by operating the receiver in a vacuum enclosure (labelled 300K in figure 5.2). But infrared radiation must also be blocked. Your body is receiving about 700W from the surroundings! (and radiating back about the same amount). A typical 4-liter reservoir of liquid He, exposed to the same flux, would evaporate in 2 minutes! Yet the hold time of a cryostat is one to several weeks, four orders of magnitude more. This is achieved via the two radiation screens labelled 70K 15K in figure 5.2, as well as by reducing to a minimum all conduction losses. The radiation screens are kept cold by a closed-cycle cryogenic machine involving the compression and expansion of helium gas. The 15K stage is also used to cool the first stages of IF amplification. Future receivers will feature fully closed-cycle cryogenics, including the 4K stage.

5.9 Actual receivers

Figure 5.7 shows the performance of one of the Plateau de Bure 230GHz receivers. The present LO/IF system dictates a 1.5GHz IF, therefore, these receivers are operated in DSB mode; in the interferometer, the sidebands can be separated due to their different fringe rates.

Figure 5.8 gives you a chance to peek at the cold RF assembly of one of the dual-channel receivers in operation at the 30-m telescope since May 1998.

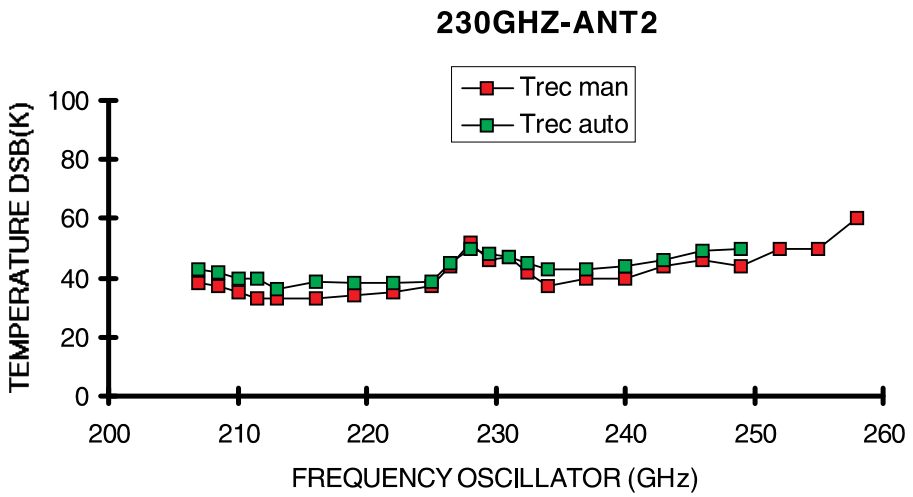

Figure 5.7: DSB noise performance of one of the 230GHz receivers in operation at the PdB interferometer

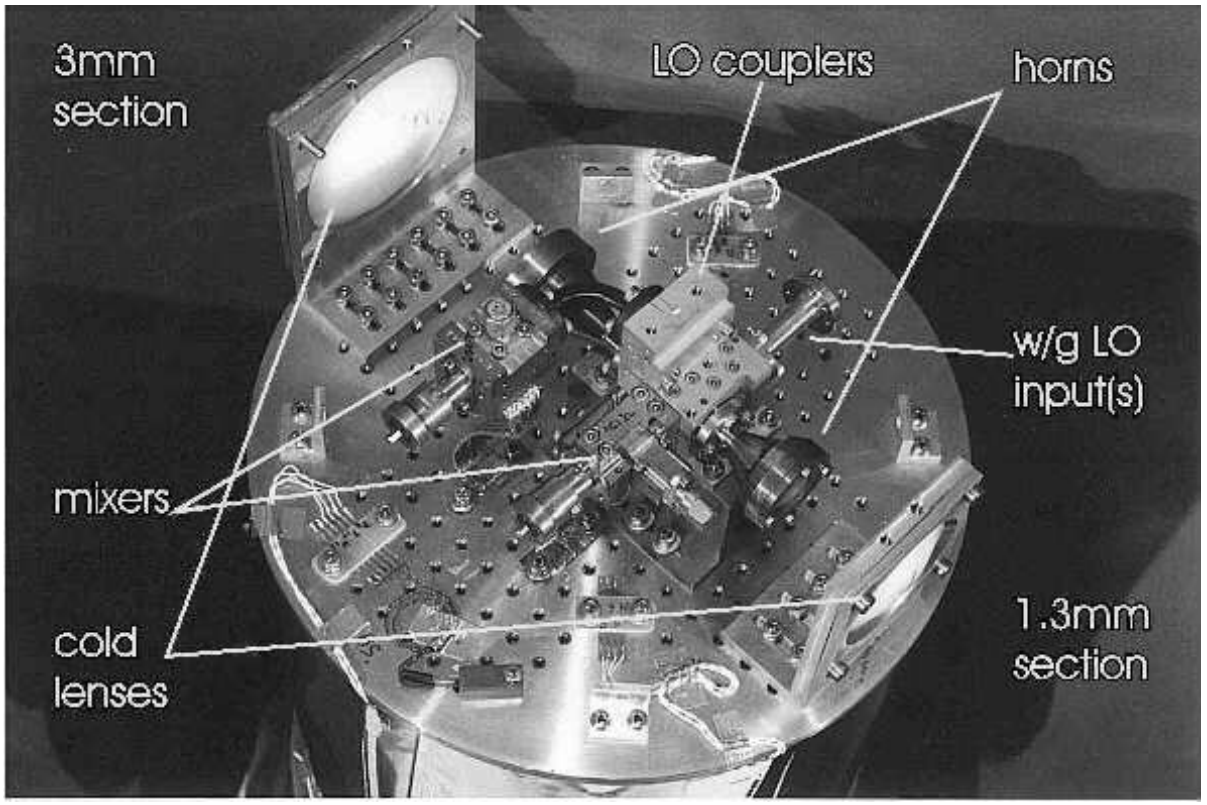

Figure 5.8: The cold RF assembly for a dual-channel receiver used at the 30-m telescope.